


RL-2KS/2KA DUAL-CHANNEL CHARGER FOR CAMERA BATTERY USER MANUAL

Thank you for choosing our product, please read this manual carefully before operating and save it for future reference.

Features

- RL-2KS/2KA is a dual channel charger for professional camera battery.
- RL-2KS is for V-mount battery, RL-2KA is for Gold mount battery.
- Can charge two batteries simultaneously.
- Can power the camera directly as a power adaptor.

Appearance

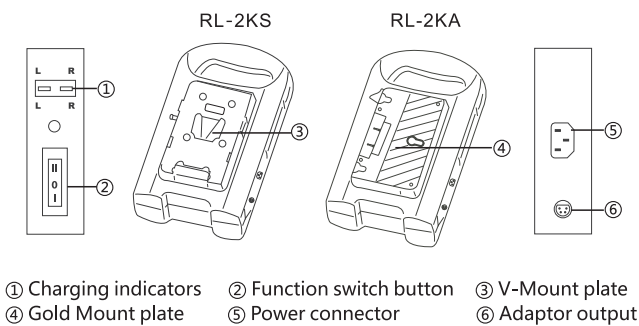

Technical parameters

Model	RL-2KS	RL-2KA
Input	AC 90V-240V 50/60Hz	
Charge output	DC 16.8V, 3A, Max. 100W	
Adapter output	DC 15V, 4A, Max. 60W	
Working temperature	-10°C-40°C	
Dimensions(inches)	9.61*5.87*4.10	9.61*5.87*3.47
Weight	2.21lbs	2.08lbs
Applicable battery	V-mount Battery	Gold mount Battery

Caution

- Please make sure that the package is intact after receiving the product. The product might be damaged if the package is broken.
- Prevent product deformation, otherwise it may cause damage to internal electronic components and circuits.
- Do not disassemble the product housing, so as to avoid unexpected injury to you.

Operation Instructions

Charging Operation:

- Connect the charger to 90~240V AC power by the supplied power cable. Hang the battery onto the plate of the charger.
- Switch the function button to charging position, the indicator turns RED, charging starts.
- When the indicator turns ORANGE, the battery is nearly full charged. When the indicator turns GREEN, the battery is fully charged. Turn off the switch and remove the battery.

Adaptation Operation:

- Connect camera to the adaptor output of the charger by supplied adaptor cable. Connect charger to 90~240V AC power by supplied power cable. Switch the function button to adaptor position, indicator turns RED means it start power the camera.

Warranty

Warranty rules

- Warranty period is 12 months from the date of sale to the direct customers. 7 days free return, 15 days free replacement, 12 months free repair is provided for products with performance defects under normal use.

This warranty does not cover any problems related to the following:

- Damage caused by normal wear of parts, scratches, surface rust or deterioration.
- Damage caused by improper operating, abnormal use, improper storage, or lack of regular maintenance.
- Removed or altered product stickers or serial numbers which void our warranty.
- Product repaired, dismantled, or altered by unauthorized technical personnel.
- Products beyond the warranty period.
- Damage caused by force majeure (such as fire, flood, war, earthquake, snowstorm, etc.)

Disclaimer

Our company will not be responsible for any product damages or accidental damages from overheating or short circuit caused by use not in according with this manual.