

Quad B-Mount Battery Charger


User Manual

Thank you for choosing our product. Please read this manual carefully before operating and save it for future reference.

Features

- This product is a special charger for camera lithium-ion battery.
- This product is a lithium-ion battery charger with B-Mount interface.
- This product is a four channel simultaneous charger.

Appearance

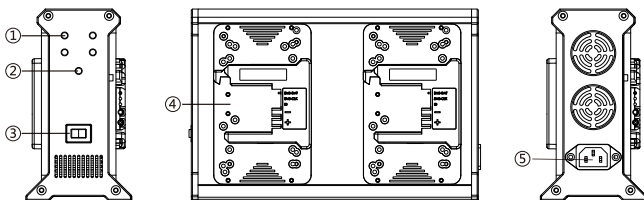

- ① Charging indicators
- ② Power indicator
- ③ Switch
- ④ B-Mount battery plate
- ⑤ AC input

Specification

Model	B-Mount Charger
Input	AC 100V-240V 50/60Hz
Charging output	DC 33.6V, 3A, Max 400W
Work temperature	-10°C~40°C
Dimensions	255*94*170mm
Weight	2840g
Applicable Battery	B-Mount battery

Disclaimer

Our company will not be responsible for any product damages or accidental damages from overheating or short circuit caused by use not in accordance with this manual.

Operation Instruction

Charging instruction

- Use the provided power cable to connect the charger to a 100-240V AC power source.
- Attach the battery to be charged to the B-mount plate of the charger.
- Turn on the switch. The power indicator should turn on, and the charging indicator should turn red, indicating that the battery is being charged.
- Wait for the charging indicator to turn green, which means the battery is fully charged.
- Turn off the switch and remove the battery from the charger.

Caution

- Do not expose the battery to a high temperature over 140°F/60°C.
- Keep away from fire.
- Keep away from water.
- Do not disassemble and repair.
- Please use the recommended charger.
- Do not short the battery terminals.
- Avoid impact.

Warranty

Warranty Rules

• Warranty period is 2 years from the date of sale to the direct customers. The company provides free repairs for products with performance defects under normal use within the warranty period.

This warranty does not cover any problems related to the following:

- Damage caused by normal wear of parts, scratches, surface rust or deterioration.
- Damage caused by improper operating, abnormal use, improper storage, or lack of regular maintenance.
- Removed or altered product stickers or serial numbers which void our warranty.
- Product repaired, dismantled, or altered by unauthorized technical personnel.
- Products beyond the warranty period.
- Damage caused by force majeure (such as fire, flood, war, earthquake, snowstorm, etc.)