



User Manual

RL-EXC2


Dual Channel DV Battery Charger (U-Series)

Thank you for choosing our product. Please read this manual carefully before operating and save it for future reference.

Product Description

1. This is a charger for SONY BP-U30/U60 batteries.
2. With dual channel design, it can charge two batteries simultaneously.
3. It is featured with charging short-circuit protection function.

Appearance

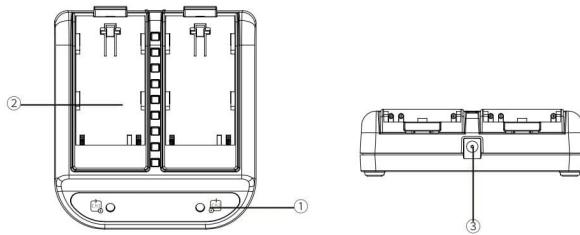

①Charging indicator ②Charging Channel ③DC Input

Specifications

| | |
|------------------|--|
| Input | DC 24V/3.5A |
| Output | DC 16.8V, 2A*2 Simultaneous charging of two channels |
| Dimensions | 4.81" x 5.32" x 1.42" |
| Weight | About 0.54lbs (243g) |
| Work temperature | -10°C~40°C |
| Packing List | Charger X1、Adaptor X1、Power Cable X1、User Manual X1、 |

Instructions

1. Connect the adaptor to the DC input of the charger, and then connect the AC cable of the adaptor to a 100~240V power supply, the indicator lights up green.
Note: Please turn on the power of the charger before installing the battery.
2. Put the battery into the charging slot, the charger will start charging after detecting the battery, and the indicator will change from green to red.
3. When the battery is fully charged, the indicator changes from red to green.
Remove the battery and disconnect the power supply.

Cautions

1. Please make sure that the package is intact after receiving. The product might be damaged if the package is broken.
2. It is limited to charging the designated battery, it may cause dangerous if it is used for other purposes without authorization.
3. Prevent the product from being deformed, otherwise it might lead to damages of inside electronic components and circuits.
4. The charger slightly heats up during charging, which is normal.
5. When the charger is not used for a long time, please unplug the power cable.
6. Please use the charger in an environment of -10°C~40°C.
7. Do not cover the cooling vent during charging.
8. Do not short-circuit the charging channel terminals.
9. Do not disassemble or repair the product by yourself.
10. Please store in a cool and dry place.

Warning

Warranty period is 12 months from the date of sale to the direct customers. 15 days free replacement, 12 months free repair is provided for product with performance defects under normal use.

This warranty does not cover any problems related to the following:

- Damage caused by normal wear of parts, scratches, surface rust or deterioration.
- Damage caused by improper operating, abnormal use, improper storage, or lack of regular maintenance.
- Removed or altered product stickers or serial numbers which void our warranty.
- Product repaired, dismantled, or altered by unauthorized technical personnel.
- Products beyond the warranty period.
- Damage caused by force majeure (such as fire, flood, war, earth-

Disclaimer

Our company does not assume any responsibility for product damage or any other accidents caused by product overheating or short circuit caused by failure to follow instructions in this manual.